


TIMEX®

Model T303

**Atomic Time AM/FM Clock Radio
with Dual Alarm**

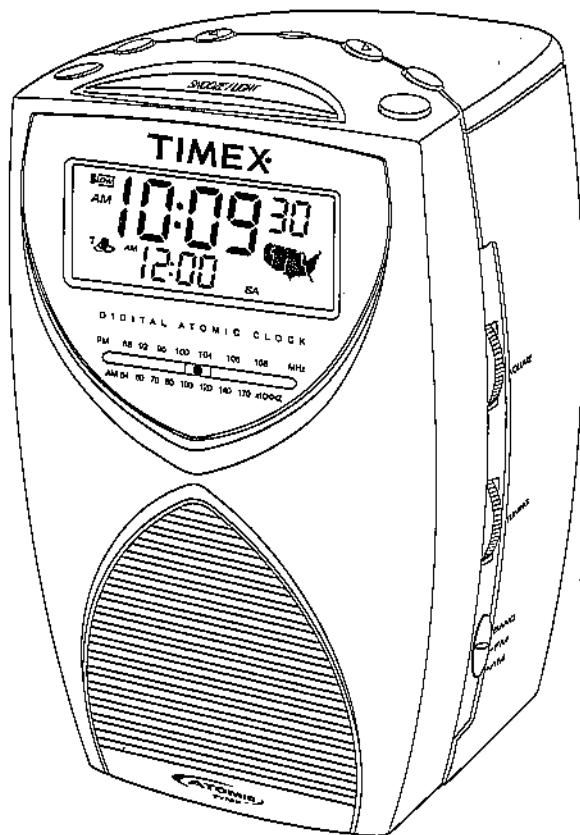



CAUTION

**RISK OF ELECTRIC SHOCK.
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



This symbol is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

These symbols are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot. Fully insert.

ATTENTION: Pour éviter les choc électriques. Introduire la lame la plus large de la fiche dans la borne correspondante de la prises et pousser jusqu'au fond.

Table of Contents

A Consumer Guide to Product Safety	4-5
Preparation for Use	6-8
Introduction	
Important Information about the US Government's Atomic Clock Time Signal	
Unpacking and Set Up	
Battery Installation and Operation	
Main Battery Installation	
Battery Backup Installation	
Battery Backup System	
AC Adapter Operation	
Controls and Indicators	9
LCD Display	10
Automatic Time Setting	11-13
Overnight Automatic Date Setting	
For the Best Reception Results	
Setting Your Time Zone and Daylight Savings Time	14-15
Manual Setting the Clock Time and Year	
Setting the Dual Alarm Times	
Wake to Alarm 1 and/or Alarm 2	15
Listening to the Radio	16
Wake to Buzzer or AM/FM Radio	16-17
Turning Off the Alarm	
Snooze/Back Light Operation	
Dimmer Switch	
Sleep to AM/FM Radio	17
Maintenance	17
Trouble Shooting	18

A Consumer Guide to Product Safety

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warnings, and always follow the instruction on the unit and in the instruction and service manuals.

1. **Water and Moisture** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** - This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of your polarized plug.
6. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** - The unit should be cleaned only as recommended by the manufacturer.
8. **Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
9. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

A Consumer Guide to Product Safety

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warnings, and always follow the instruction on the unit and in the instruction and service manuals.

1. **Water and Moisture** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** - This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of your polarized plug.
6. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** - The unit should be cleaned only as recommended by the manufacturer.
8. **Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
9. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

A Consumer Guide to Product Safety

10. **Damage Require Service** - The unit should be serviced by qualified service personnel when:
- A. The power supply cord or plug has been damaged.
 - B. Objects have fallen into or liquid has been spilled into the enclosure.
 - C. The unit has been exposed to rain.
 - D. The unit has been dropped or the enclosure damaged.
 - E. The unit does not appear to operate normally or exhibits a marked change in performance.
11. **Antenna** - Do not connect to an external antenna.
12. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
13. If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.

**This device complies with Part 15 of the FCC Rules.
Operation is subject to the condition that this device
does not cause harmful interference.**

Preparation for Use

Introduction

Congratulations, and thank you for purchasing one of the world's most accurate clock radios. This clock radio receives continuous time signals that are broadcast from what is known as the Atomic Clock. The Atomic Clock is from the US Government's National Institute of Standards and Technology in Boulder, Colorado.

When the signal from the Atomic Clock is received, this clock radio sets itself automatically and displays the correct time, month, date, and day of the week. Adjustments between standard time and daylight savings time are also done automatically.

The clock radio has a dual alarm system that can be set for separate wake up times. The brightness of the clock's back lighting is adjustable. When the radio is turned on, the dial pointer will light up for easy visibility when tuning.

The Battery backup system will maintain all time and alarm settings if the AC power is interrupted. They will also maintain the settings if you are operating the unit on the main batteries and you need to replace them.

We suggest you read through this instruction manual before setting up your new fascinating clock radio.

Important information about the US Government's Atomic Clock time signal

- The signal is broadcast continuously from Boulder, Colorado.
- As with any radio signal, the Atomic Clock time signal is strongest at the transmission tower in Boulder, and becomes weaker as the distance from the transmitter increases.
- The time signal broadcast contains a stream of information which can take several minutes to receive. In addition, there is a microcomputer in this clock radio that will analyze the signals, thus making it take approximately 3 minutes or more to display the correct time and date. The amount of time depends on the signal strength and atmospheric noise.
- Interference from other strong radio signals can effect the Atomic Clock signal and make it difficult to receive. For example, on the East Coast of the USA, especially in the Middle Atlantic States, interference from the radio control tower in the UK can temporarily block reception of the Atomic Clock signal. The interference is strongest during daylight hours and decreases at night. **Therefore, in areas of high interference, such as Boston, reception of the Atomic Clock signal may not occur until midnight when the interference is reduced.**

Preparation for Use

- The Atomic Clock signal can be blocked by metal shielding. For example, in a high rise apartment or office building which has a structural steel frame and windows, reception of the Atomic Clock signal may be difficult.
- Other household devices or appliances can interfere with the reception of the Atomic Clock signal. For example, it is not recommended to place this clock radio on top of your television set or very close to your computer.
- If you prefer, you can set the clock to your local time manually (See *Manually Setting the Clock Time and Year*). However, once the signal is received, the clock radio will override your manual settings and be synchronized precisely with the US Atomic Clock in Boulder.

Unpacking and Set Up

1. Remove the clock radio and all packing materials from the carton. It is a good idea to save all the packing materials in case the unit ever needs to be returned for service. If you do dispose of the packing, please do so properly.
2. Remove any feature labels, fact tags, or clear protective films from the front or top of the radio, if applicable. Do not remove any labels from the back or bottom of the radio.
3. Place the unit on a level surface, out of direct sunlight, and away from sources of excess dust, dirt, heat, water, moisture, vibration, and strong magnetic fields.
4. Do not block the ventilation holes on the back or bottom of the cabinet.
5. Before installing the batteries or plugging in the AC adapter, please read all the instructions in this manual.


Battery Installation and Operation

Note: This unit can operate through an AC adapter or the main batteries. Separate batteries should also be installed for the battery backup feature.

Main Battery Installation

- 3 "AA" batteries operate the unit when there is not an AC adapter in use.
1. Open the battery compartment door located at the bottom of the unit.
 2. Install 3 "AA" batteries, while making sure that the + and - ends match up with those inside the battery compartment.
 3. Close the battery compartment door.

Note: We recommend using alkaline batteries for longer life.

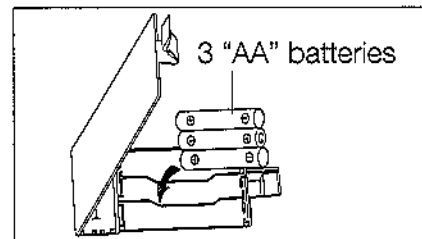


Preparation for Use

Battery Backup Installation

2 "AAA" batteries will operate the battery backup system.

1. Open the battery compartment door located at the bottom of the unit.
2. Lift the cover clip and remove.
3. Install 2 "AAA" batteries, while making sure that the + and - ends match up with those inside the battery compartment.
4. Reinstall the cover clip by placing the tab into the slot, then gently push down until it clicks into place.
5. Close the battery compartment door.

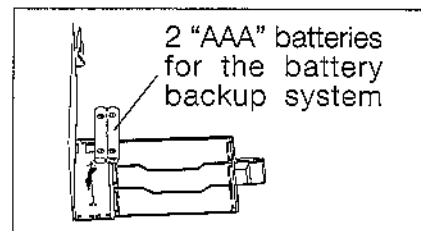

Note:

- We recommend using alkaline batteries for longer life.
- When the batteries are installed, there is a chance that the signal reading at the bottom of the display is momentarily incorrect due to interference. It will stabilize in a few seconds and you will receive the correct reading.
- When the backup batteries are getting weak the **Battery Low Icon** () will appear on the upper left corner of the display. The **Battery Low Icon** () is for the backup batteries only.

Battery Backup System

2 "AAA" batteries will maintain the time and alarm settings in the event of a temporary power interruption. The radio will not play, but the display remains visible and everything continues to run. If you have set the alarm for radio and there is a power failure during your wake up time, the radio will default to buzzer for sure alarm. If a power failure occurs and the 2 "AAA" batteries are not installed or dead, the alarm will not sound. Also, the display will black out and all the settings will be lost. When the power is restored, you must reset the time and other settings.

AC Adapter Operation

- An AC adapter is included with this unit.
- Plug the AC adapter into the DC input jack on the back of the unit, then plug into a wall outlet.

Note: If at anytime you need to purchase an AC adapter for this unit, make sure that it is a 6V, 350mA Positive Center AC adapter only.

Preparation for Use

Battery Backup Installation

2 “AAA” batteries will operate the battery backup system.

1. Open the battery compartment door located at the bottom of the unit.
2. Lift the cover clip and remove.
3. Install 2 “AAA” batteries, while making sure that the + and – ends match up with those inside the battery compartment.
4. Reinstall the cover clip by placing the tab into the slot, then gently push down until it clicks into place.
5. Close the battery compartment door.

Note:

- We recommend using alkaline batteries for longer life.
- When the batteries are installed, there is a chance that the signal reading at the bottom of the display is momentarily incorrect due to interference. It will stabilize in a few seconds and you will receive the correct reading.
- When the backup batteries are getting weak the **Battery Low Icon** () will appear on the upper left corner of the display. The **Battery Low Icon** () is for the backup batteries only.


Battery Backup System

2 “AAA” batteries will maintain the time and alarm settings in the event of a temporary power interruption. The radio will not play, but the display remains visible and everything continues to run. If you have set the alarm for radio and there is a power failure during your wake up time, the radio will default to buzzer for sure alarm. If a power failure occurs and the 2 “AAA” batteries are not installed or dead, the alarm will not sound. Also, the display will black out and all the settings will be lost. When the power is restored, you must reset the time and other settings.


AC Adapter Operation

- An AC adapter is included with this unit.
- Plug the AC adapter into the DC input jack on the back of the unit, then plug into a wall outlet.


Note: If at anytime you need to purchase an AC adapter for this unit, make sure that it is a 6V, 350mA Positive Center AC adapter only.

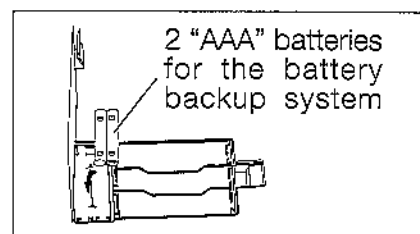

Controls and Indicators

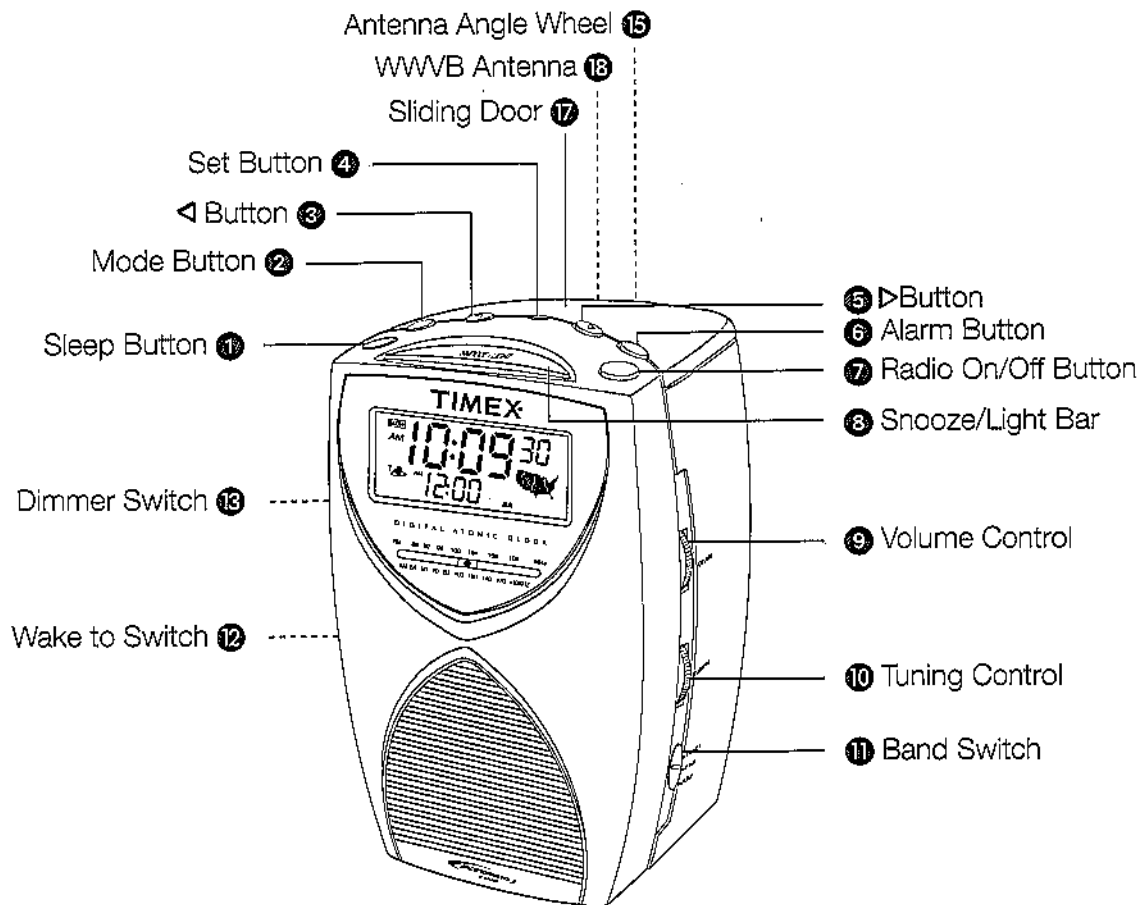


LCD Display

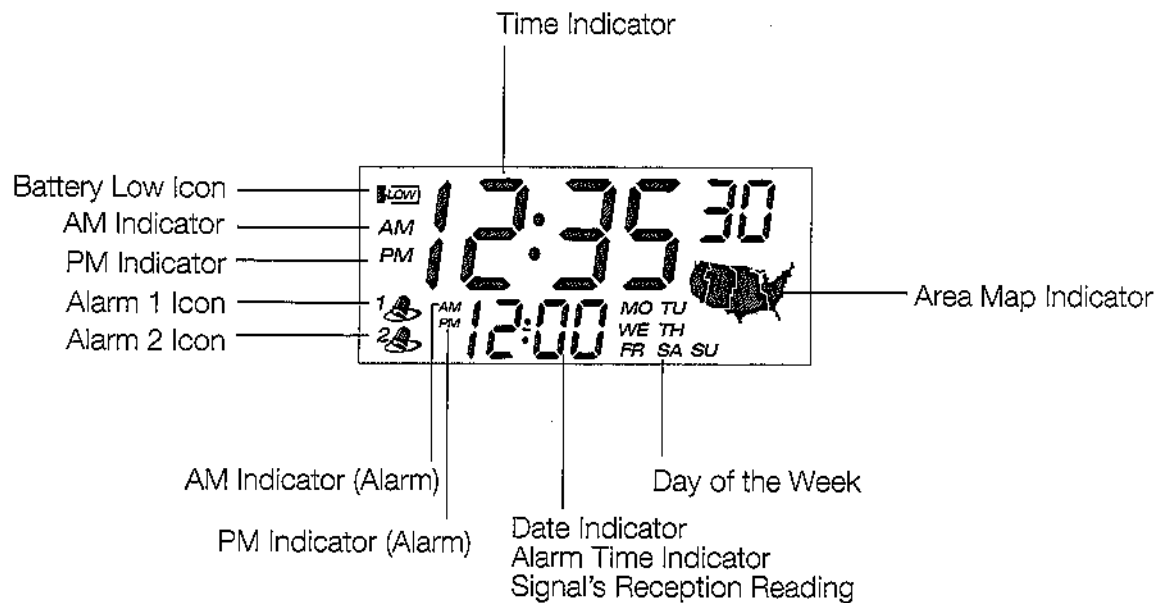

Automatic Time Setting


After installing the main batteries and/or plugging in the AC adapter, you will hear a beep confirmation and the display will read 12:00 and begin running. The antenna is now open to attempt to “lock-in” the WWVB signal for 15 minutes.

1. At the bottom of the display there will be a reading of the signal's reception quality. This will remain on the display for approximately 3 minutes, but the antenna will remain open to “lock-in” the signal for 15 minutes.

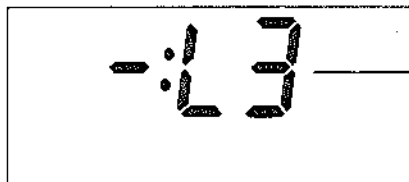

Signal Strength

2. In order to “lock-in” the signal, the reading must be the maximum number (5 or 6). If the unit is not showing a high signal strength reading, we suggest that you remove the 17 Sliding Door and aim the arrows on the antenna towards Colorado (either by hand or by using the 15 Antenna Angle Wheel). Also, move the clock radio around the room or near a window to help with the reception. For the best reception possible, we recommend following the hints under *For the Best Reception Results*.

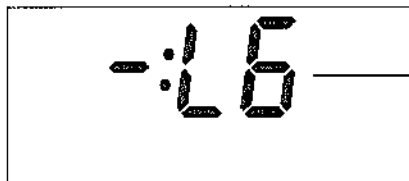

Maximum Signal Strength

3. If the unit “locks-in” the clock and date will automatically be set to Eastern Standard Time. If you do not live in this time zone, then follow the simple instructions under *Setting Your Time Zone and Daylight Savings Time* to simply change the clock time to your time zone.
4. If the clock reads 12:15 AM and has not “locked-in” to the WWVB signal, then you can choose from two similar methods to set the clock time, date and year. If you still wish to see if the unit “locks-in” the signal, then follow the steps under *Overnight Automatic Date Setting*. If you wish to set everything manually, then follow the steps under *Manually Setting the Clock Time and Year*.

Automatic Time Setting

Overnight Automatic Date Setting

As was mentioned earlier in this manual, the reception quality is the strongest near midnight.

If during the day your **13 WWVB Antenna** was not receiving a strong enough signal to “lock-in” and automatically set the time and date, we suggest you set the time correctly, but leave the date incorrect. Then simply leave the clock overnight and check the following morning to see if the correct date was automatically set for you.

1. Press and hold the **4 Set** button until the hour digits begin to flash. Then press the **3 5 < or >** button to set the correct hour. REMEMBER to set the correct AM or PM. The AM and PM indicators will appear on the left side of the display.
2. Press the **4 Set** button until the minute digits begin to flash. Then press the **3 5 < or >** button to set the correct time.
3. After setting the time, press the **4 Set** button 3 times to return to normal mode.
4. The time should now be set correctly, but the date should remain incorrect. Make sure the unit is in the best area possible to receive the strongest signal strength, then let it sit overnight.
5. On the following day check the date. If it is now set correctly, the **13 WWVB Antenna** successfully “locked-in” the WWVB signal.

The Unit Automatically Attempts to “Lock-in” to the Atomic Clock Signal

- The unit will automatically attempt to “lock-in” to the WWVB signal for approximately 15 minutes when the clock’s display reads on or about 12:00 AM (midnight). This will occur every time the clock’s display is showing on or about the midnight hour. (See *Important information about the US Government’s Atomic Clock time signal*).
- While the unit is **automatically** attempting to “lock-in” to the signal, the reception quality will **not** appear at the bottom of the display.
- If you wish to check and see the signal’s reception quality, just press and hold the **8 Snooze** button for approximately 3 seconds. The reception quality will appear on the bottom of the display. If you would like the display to return to the normal mode, press and hold the **8 Snooze** button again.

Manually Attempting to “Lock-in” to the Atomic Clock Signal


- You can manually attempt to “lock-in” to the WWVB signal from the atomic clock, by pressing and holding the **8 Snooze** button for approximately 3 seconds.
- Release the **8 Snooze** button when the reception quality appears at the bottom of the display.

Automatic Time Setting


- REMEMBER - you need to have a high signal strength reading (5 or 6) to "lock-in" to the WWVB signal. To help the unit receive a high signal reading, see *For the Best Reception Results*.

For the Best Reception Results


- To get better reception results, place your two thumbs on top of the **17 Sliding Door** and gently slide it towards the back of the unit until the top is completely off.

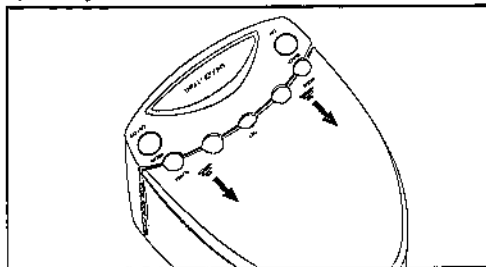

- You may also place the **18 WWVB Antenna** in the stand. If desired, you can use double sided tape or screws (not included) to attach the stand wherever you wish.

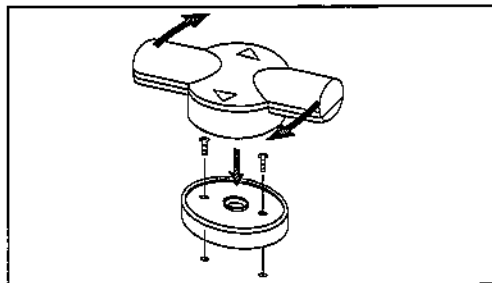

- Take out the **18 WWVB Antenna** and aim the arrows on top towards Colorado. You may also have to move the unit around to different parts of the room. Place the WWVB Antenna Wire in the groove at the back of the unit, then place the **17 Sliding Door** back on.

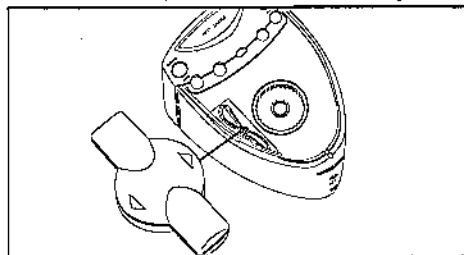

Notes:

- When you touch the antenna, there is a chance that the signal reading at the bottom of the display is momentarily incorrect due to interference. When you are no longer touching the antenna, it will eventually stabilize and you will receive the correct reading.
- Due to the characteristics of daytime transmission and atmospheric noise, the WWVB reception quality will be better at night.



Setting Your Time Zone and Daylight Savings Time

Note: You should set your time zone before you set the time manually.

1. Press and hold the **② Mode** button until the area map begins flashing.
2. Press the **③⑤ ◀ or ▶** button to adjust the darkened time zone to your living area.
3. Press the **② Mode** button and the display will change to **DSD (daylight savings detection)**. In the upper right corner of the display you'll see "dsd" and at the bottom of the display it will read either "On" or "Off".
4. Press the **③⑤ ◀ or ▶** button to set the daylight savings detection "On" or "Off". If you set it to "On", the time will be automatically changed during daylight savings time. If you set it to "Off", the time will not change during daylight savings time.
5. Press the **② Mode** button to return the display to the normal mode.

Manually Setting the Clock Time and Year

1. Press and hold the **④ Set** button until the hour digits begin to flash. Then press the **③⑤ ◀ or ▶** button to set the correct hour. REMEMBER to set the correct AM or PM. The AM and PM indicators will appear on the left side of the display.
2. Press the **④ Set** button until the minute digits begin to flash. Then press the **③⑤ ◀ or ▶** button to set the correct time.
3. Press the **④ Set** button and the year digits begin to flash. Then press the **③⑤ ◀ or ▶** button to set the correct year.
4. Press the **④ Set** button and the month digits begin to flash. Then press the **③⑤ ◀ or ▶** button to set the correct month.
5. Press the **④ Set** button and the date digits begin to flash. Then press the **③⑤ ◀ or ▶** button to set the correct date.
6. Press the **④ Set** button when you are finished. The display will return to normal mode.

Setting the Dual Alarm Times

This clock features two alarms that can be set and used independently. You can set both alarms to wake two people at different times, set one alarm as a backup to the other in case you shut off the first alarm to go back to sleep, or use one alarm for weekdays and the other for weekend wake up times.

Setting Your Time Zone and Daylight Savings Time

1. Press the **Mode** button (do not press and hold). The Alarm 1 icon () and alarm time will flash on the lower left side of the display. If no buttons are pressed in approximately 6 seconds, the display will return to normal mode.
2. Press the **◀** or **▶** button to set the correct alarm time. REMEMBER to set the correct AM or PM. A small AM or PM indicator will appear on the left side of the alarm time.
3. Press the **Mode** button and the Alarm 2 icon () and alarm time will flash.
4. If you need to set the Alarm 2 time, then follow step 2 above. If you do not need to set Alarm 2, then press the **Mode** button again or let the Alarm 2 icon and alarm time flash for approximately 6 seconds. The display will return to normal mode.

Note: While setting the alarm times, if you press and hold the **◀** or **▶** button the minutes will begin counting in ten minute intervals, then get faster. This will assist you in setting the alarm time(s) both fast and exact.

Wake to Alarm 1 and/or Alarm 2

1. Press the **Mode** button (do not press and hold). The Alarm 1 icon () and alarm time will flash on the lower left side of the display. If no buttons are pressed in approximately 6 seconds, the display will return to normal mode.
2. Press the **Alarm** button. The Alarm 1 icon () will stop flashing. Alarm 1 is now set to turn on at the set time. The Alarm 1 icon () will also appear on the display when you return to normal mode.
3. Press the **Mode** button twice and the Alarm 2 icon () and alarm time will flash. If you want to set Alarm 2 to turn on at the set time, then press the **Alarm** button. The Alarm 2 icon () will stop flashing on the display and appear when the display is back in normal mode. If you do not want Alarm 2 to turn on at the set time, then press the **Mode** button again or let the Alarm 2 icon and alarm time flash for approximately 6 seconds. The display will return to normal mode.
4. If either alarm's icon is on the display in the normal mode and you do not want the alarm to turn on at the set time, press the **Mode** button once for Alarm 1 or twice for Alarm 2.
5. While the alarm time is flashing, press the **Alarm** button. The Alarm(s) icon will begin to flash. The alarm(s) are no longer set to turn on and the icons will not appear in the normal mode.

Listening to the Radio

Note: For the best possible reception, you should fully extend the FM wire antenna. Also, rotate the radio if required for the best AM reception.

1. Press the **7 Radio On/Off** button to turn the radio On. The LED dial pointer will light.
2. Slide the **11 Band** switch to AM or FM. Then rotate the **10 Tuning** control to the station you prefer.
3. Rotate the **9 Volume** control to find a comfortable volume level.
4. Press the **7 Radio On/Off** button to turn the radio Off.

Wake to Buzzer or AM/FM Radio

1. Set the alarm time(s) as indicated in *Setting the Dual Alarm Times*.
2. Slide the **12 Wake to** switch to Buzzer or Radio.
3. If you choose to wake to radio, make sure you have used the **11 Band** switch and **10 Tuning** Control to find the station you prefer to wake to. And adjust the **9 Volume** control to find a comfortable "wake to" volume level.
4. The alarm(s) you wish to wake to should have their icons on the display during the normal mode. If they are not on the display, follow the instructions under *Wake to Alarm 1 and/or Alarm 2*.

Turning Off the Alarm

1. After the alarm sounds, press the **6 Alarm** button to turn off the alarm. The alarm will be automatically set to turn on at the same time the following day.
2. If you do not want the alarm(s) to turn on again the next day, follow steps 4 and 5 under *Wake to Alarm 1 and/or Alarm 2*.
3. If the alarm is not turned off after it sounds, it will play for approximately 1 hour, then turn off automatically. This cycle will repeat every 24 hours unless the controls are changed.

Snooze Back Light Operation

1. Press the **8 Snooze/Light** bar after the alarm sounds. The alarm will turn off then come back on in approximately 9 minutes. You may repeat this several times during the one hour alarm cycle.

Wake to Buzzer or AM/FM Radio

2. If you are operating the unit on batteries, press the **Ⓢ Snooze/Light** bar to activate the back light for approximately 10 seconds. If you are operating the unit on an AC adapter, the back light will always be on.
3. If you press and hold the **Ⓢ Snooze/Light** bar for longer than 3 seconds, the clock radio will attempt to receive a WWVB signal as indicated in **Automatic Time Setting**.

Dimmer Switch

- Slide the **ⓓ Dimmer** switch to Hi or Lo to adjust the back light brightness.

Sleep to AM/FM Radio

The sleep timer will shut the radio off automatically so you can fall asleep to the station you prefer.

1. Adjust the radio so the band, station, and volume level are what you would like to sleep to (see *Listening to the Radio*).
2. Press the **ⓓ Sleep** button. The radio will begin to play and the timer starts at 45 minutes.
3. Press the **ⓓ Overnight Automatic Date Setting** or **▶** button to set the amount of time higher or lower than 45 minutes. The time can be set anywhere from 1 to 99 minutes.
4. If you wish to turn the radio off before the timer has expired, press the **ⓓ Radio On/Off** button.

Note: If you are going to wake to radio, remember that the volume level and station you set to sleep to, will be the same volume level and station that you will wake to.

Maintenance

- Place the unit on a level surface, away from direct sunlight, and excessive heat.
- Protect your furniture when placing the unit on natural oil or a lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean your unit with a soft cloth, moistened only with soap and water. Stronger cleaning agents can mar the surface of the case.

Trouble Shooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Time does not set immediately	Signal strength is not strong enough	- Aim the arrows on the WWVB antenna towards Colorado - It is best to attempt to receive the signal at night
Time does not set properly	Time zone is not set properly	Set the correct time zone
There is no display	- The AC adapter is disconnected from the AC outlet - The AC outlet has no power - The AC outlet is controlled by a wall switch that is OFF - The unit is running on main batteries and they are dead	- Connect to an AC outlet - Try the unit on another outlet - Do not use an outlet that is controlled by a wall switch - Replace the 3 "AA" main batteries
The battery low indicator is ON	The backup batteries are not installed, weak or dead	Replace the 2 "AAA" backup batteries
Alarm(s) do not turn ON	- Alarm is not set properly - Alarm(s) are not set	- Set the alarm time(s) properly confirming AM or FM - Press the 2 Mode button and follow instructions on pages 14 and 15
Radio does not play	7 Radio On/Off button was not pressed 9 Volume control at minimum position	- Press the 7 Radio On/Off button - Turn the 9 Volume control up
Poor FM reception	Weak or distant station	Try adjusting the direction of the FM wire antenna
Poor AM reception	Weak or distant station	Rotate the cabinet to try and gain better reception
Radio shuts OFF unexpectedly	- The unit was in the Sleep Mode instead of Power On Mode - The radio was turned ON by the alarm and the alarm time ended	- Press the 7 Radio On/Off button to turn Sleep Mode OFF, then Press again to turn radio ON - Press the 7 Radio On/Off button to turn the radio back ON
If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491		

Limited 90 Day Warranty

Timex Audio Products, Division of SDI Technologies Inc., warrants this product to be free from defects in workmanship and material under normal use and conditions for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof, to the store where it was originally purchased. If you need to send the product for service, and it is during the first 90 days of the warranty period, SDI Technologies Inc. will repair, or at its discretion, replace this product with proof of purchase, without charge (except for a \$5 charge for handling, packing, return UPS/postage and insurance). After 90 days the cost of labor is the customer's responsibility. The fee for service after the warranty period or without proof of purchase is \$10.

Before returning this product for service, replace the batteries (if applicable) with fresh ones, because exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Also enclose a check or money order payable to the order of SDI Technologies Inc., for the sum of \$5 (or \$10 after the warranty period).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department

SDI Technologies Inc.
Timex Audio Products Division
8889 Gateway West
El Paso, Texas 79925

Please Note: This warranty is valid only in the United States of America. Any applicable implied warranties are also limited to 90 days, and SDI Technologies Inc. will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusions of consequential damages, so that these restrictions may not apply to you). This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation in the U.S. and other countries.